



CUSTOM GEAR SHIFT LEVERS TO SUIT FALCON EA TO FALCON AU

BPT custom gearshift levers are manufactured with less overall stick height than O.E.M gearshift levers, with this in mind creating a sportier look to enhance your cars interior and a sportier feel when making gear shifts.

Because of the reduced overall height of the gear shift stick the shifting arc geometry of the shift pattern is reduced therefore making less distance necessary from gear to gear.


SHIFT LEVER AND BOOT ASSEMBLY

REMOVAL

1. Unscrew the gearshift knob from the gear lever.
2. Gently prize the boot-retaining panel from the console and lift the boot and retainer from the lever.
3. Working through the console aperture remove the two bolts securing the shift lever to the transmission and remove the lever.

INSTALLATION

1. Position the shift lever on the left-hand side of the transmission lever, install and torque the bolts to specification.
2. Locate the boot and retainer over the shift lever and press the retainer lugs into the console.
3. Screw the knob onto the shift lever until it starts to tighten, continue tightening until the graphics on the knob are correctly aligned.

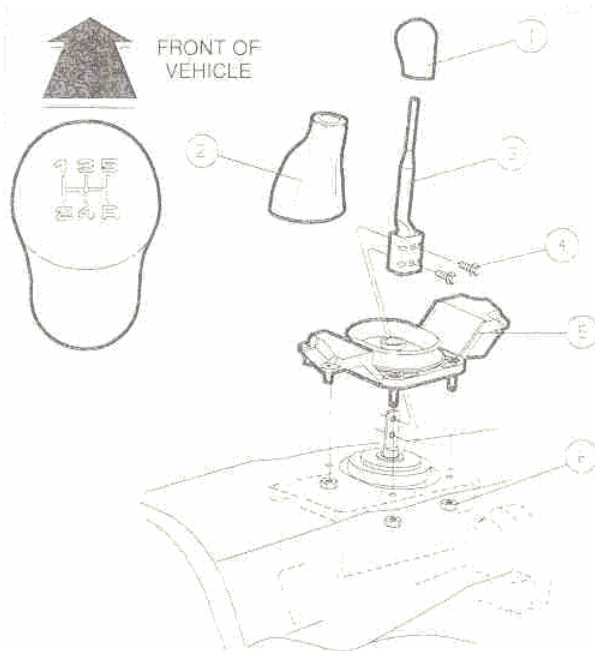

1. Knob Gearshift Lever
2. Cover
3. Trans Gearshift Lever
4. Bolt M8 x 36 Hex
5. Retainer
6. Nut

TORQUE REQUIREMENTS

ITEM 4 - 37Nm

ITEM 5 - 2 Nm

Part numbers:

EA – ED Lever gear stick	BPTEDTVE 7B098AFOR
AU Lever gear stick	BPTER7 B098AFOR
BA Lever gear stick	BPTE71548N11FOR